

4K Multi Scaler Viewer



MSV 2



Preset or Custom Layouts

MSV 2 will display multiple 4K images on one screen. Its advanced processing capabilities are ideal for multimedia presentations. Video input options include

2 dedicated HDMI channels, and 2 channels that can be switched to either HDMI or DisplayPort.

Multiple video signals can be combined into one destination layout, such as quad screen, 1 large/3 small, or a user-customized layout. Channel switching on MSV 2 is fast and seamless.

MSV 2 is controlled by buttons on the unit's front face, or by a web-based PC interface that also offers live preview.




MSV 2 user interface dashboard showing quad layout.

1. Preview and screen control.
2. Preset and channel options.
3. Screen, input, coordinate, output Information.




HDMI or DP in HDMI or DP in HDMI in HDMI in HDMI out

MSV 2 Layouts

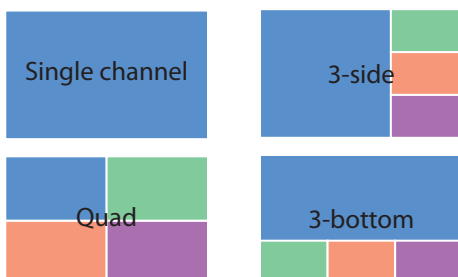

Plus, up to 5 custom user layouts.

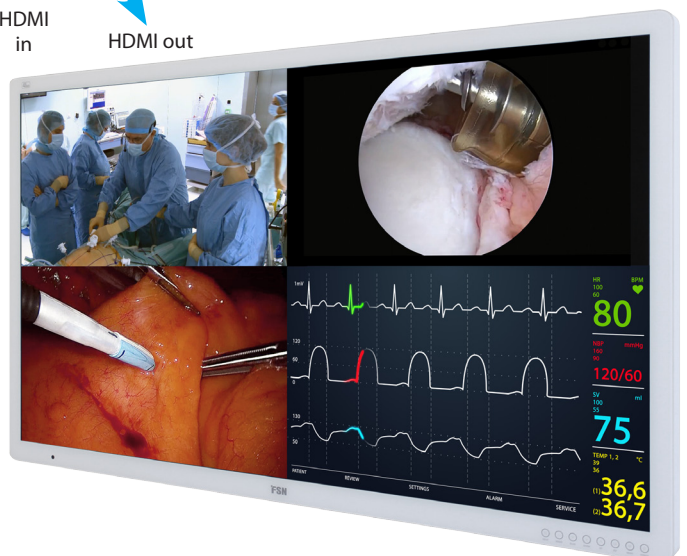

4K Multi Scaler Viewer

MSV 2




Specifications

General Features

Item	Description
Input	Signal HDMI 2.0, DisplayPort 1.2a
	Resolution Up to 4096 x 2160p@60Hz
	Ports HDMI x 2, HDMI or DisplayPort (selectable) x 2
Output	Signal HDMI 2.0
	Resolution Up to 4096 x 2160p@60Hz
	Ports HDMI x 1
Preset Modes	Quad
	3 side
	3 bottom
	Full screen (channel 1-4)

Item	Description
User Configurable Modes	x 5
User Control	Web-based PC interface. Front panel buttons. RS232.
Unit Dimension (mm)	436(W) x 44(D) x 213(H) 1 rack unit
Power Supply	DC +12V
Operating Temperature	0°C ~ +40°C
Relative Humidity	20 ~ 80 %, non-condensing
HDCP 1.4/2.2	Compliant

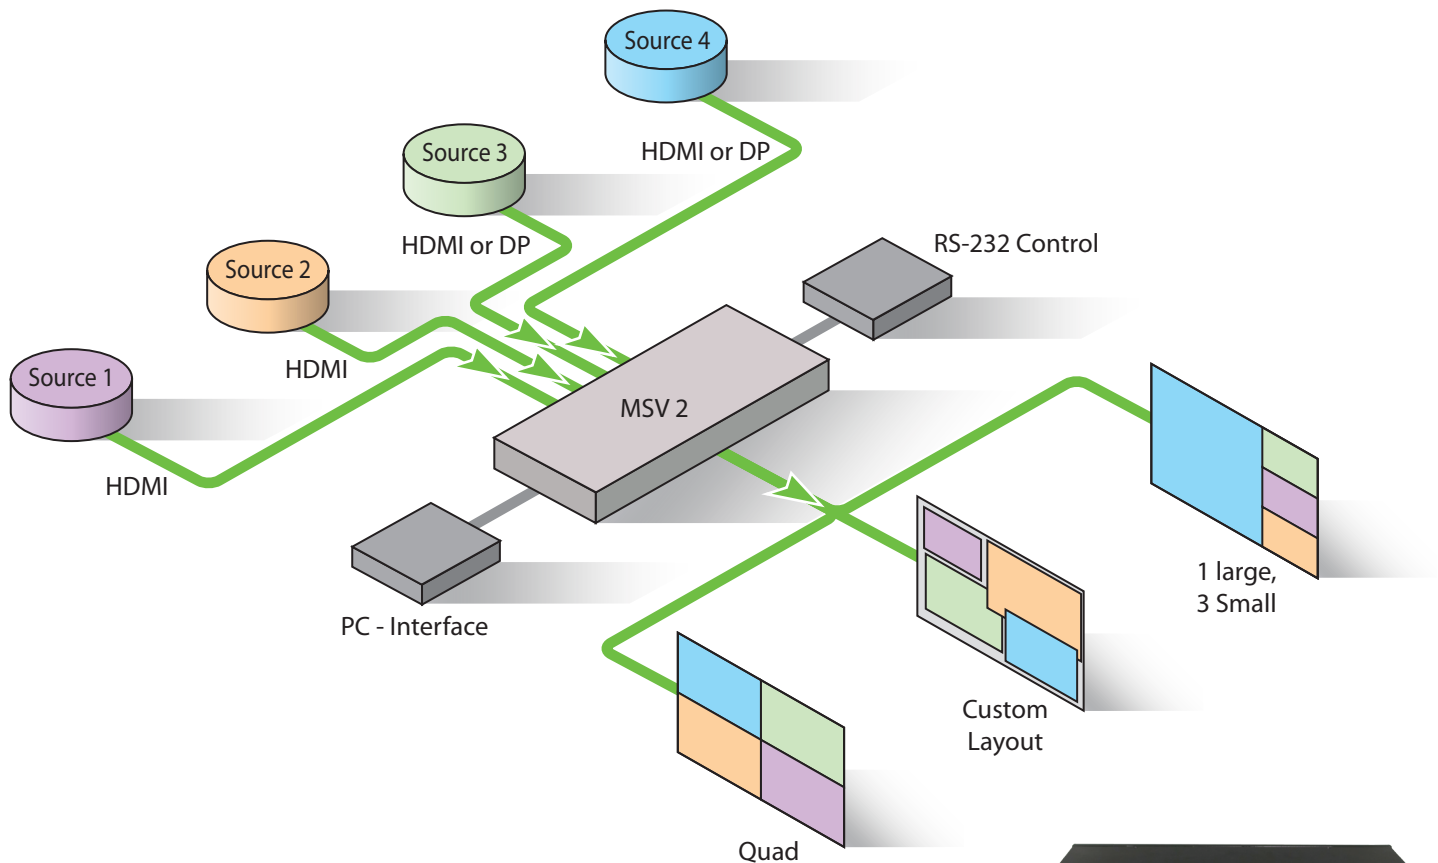

- ✓ *Fast channel switching*
- ✓ *Live preview*
- ✓ *Preset or custom layouts*
- ✓ *Control with PC/web GUI*



Black or ivory color.

Specifications are subject to change with or without notice. Doc. # FSN2035 Rev. 10/19

www.fsnmed.com

Foreseeson Custom Displays, Inc.
2210 E. Winston Road
Anaheim, CA 92806 USA
Tel: 714-300-0540
Fax: 714-300-0546

San Jose, CA Tel: 714-507-3851
Fort Lee, NJ Tel: 714-507-3852

Foreseeson Korea
404B, PangyoInnovalley B
253 Pangyo-ro
Bundang-gu Seongnam-si
Gyeonggi-do, Korea 463-400
Tel: +82-31-8018-0780
Fax: +82-31-8018-0786

Foreseeson GmbH
Industriestrasse 38a
63150 Heusenstamm, Germany
Tel: +49 6104 64398 0
Fax: +49 6104 64398 11

Foreseeson UK Ltd.
Unit 71 Barwell Business Park
Leatherhead Road
Cheshington, Surrey KT9 2NY
Tel: +44 (0) 208 546 1047

Foreseeson (Shanghai)
Medical Equipment Co., Ltd.
Room 307, 3F
No. 56, 461 Hongcao Road
Caohejing Development District
Xuhui, Shanghai 200233
Tel: 86-21-6113-4188